

Figure 6-1. RC-5C PLUS System Schematic
(Sheet 1 of 3)


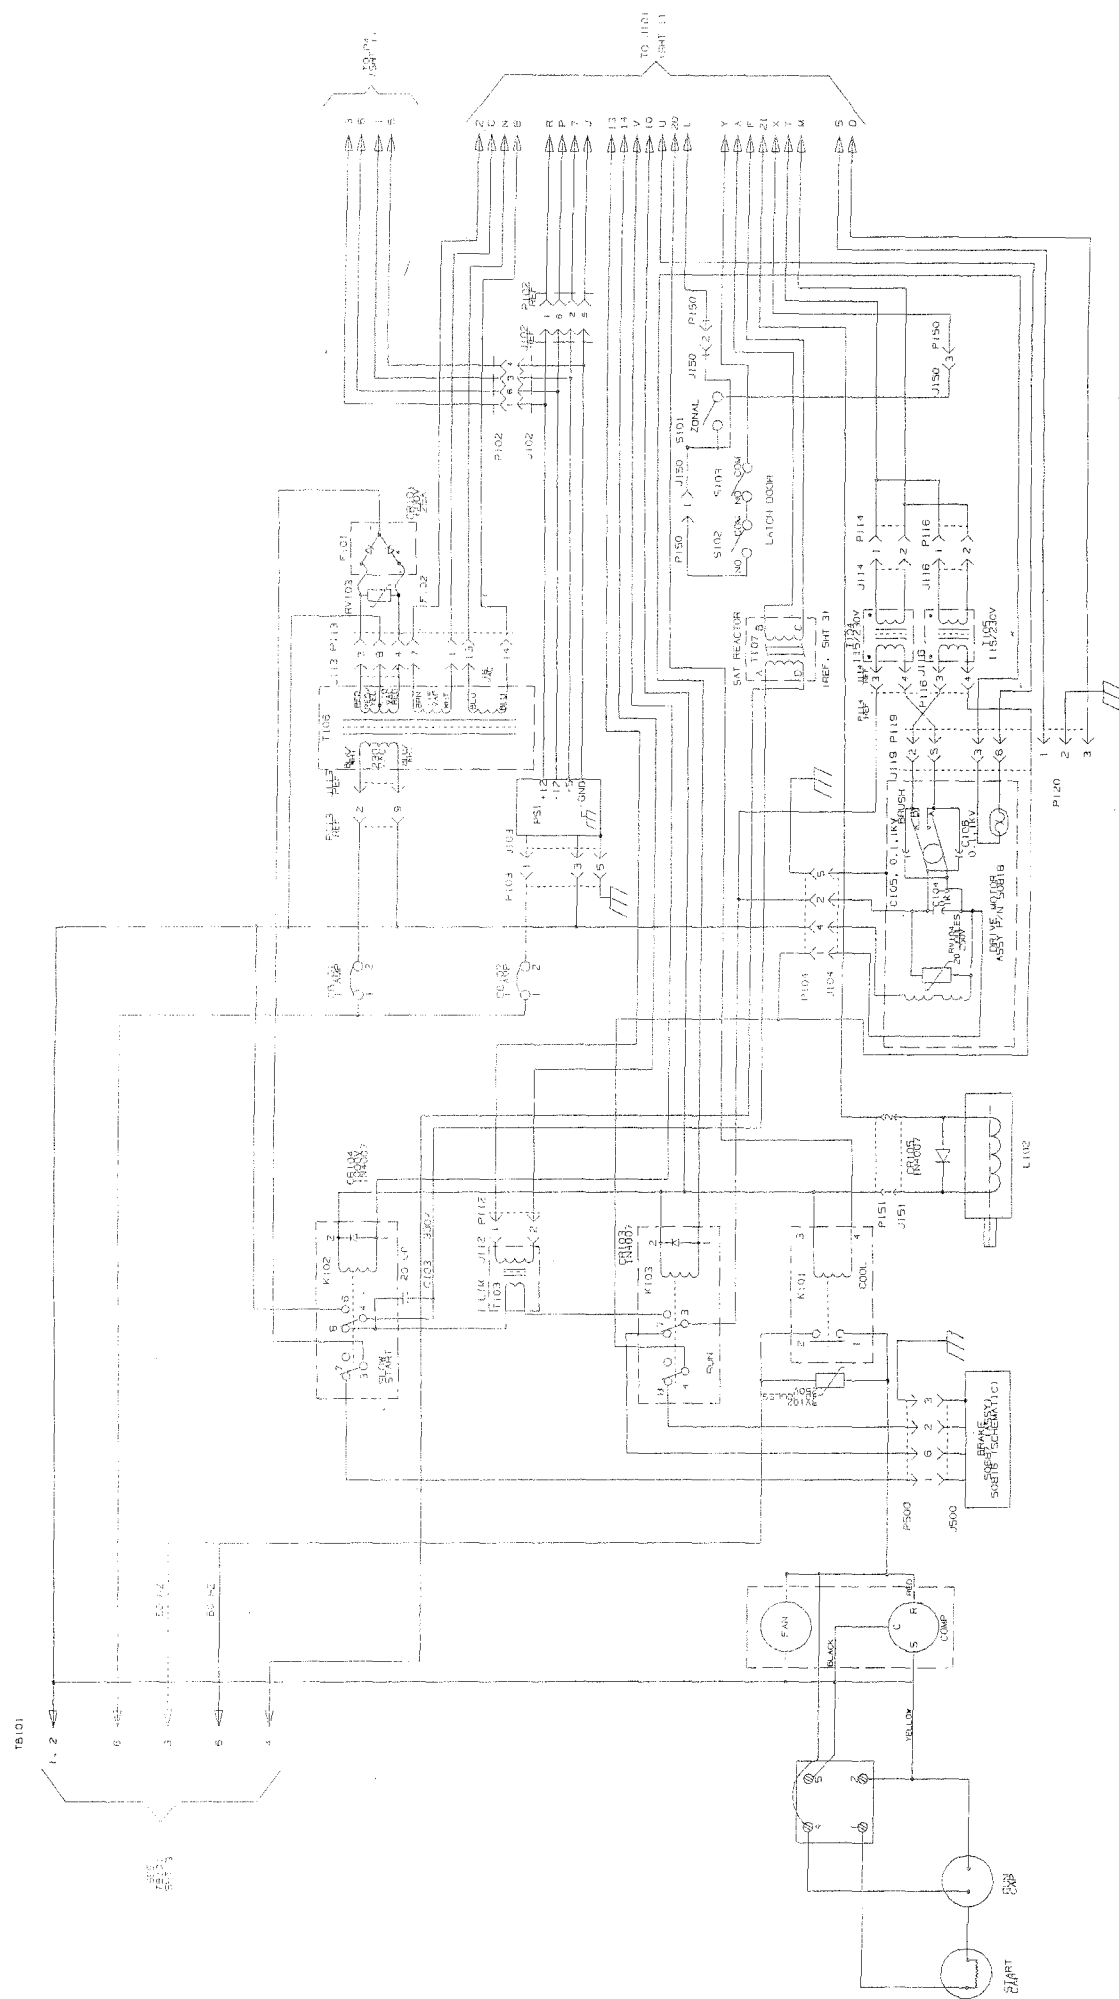


Figure 6-1. RC-5C PLUS System Schematic
(Sheet 2 of 3)

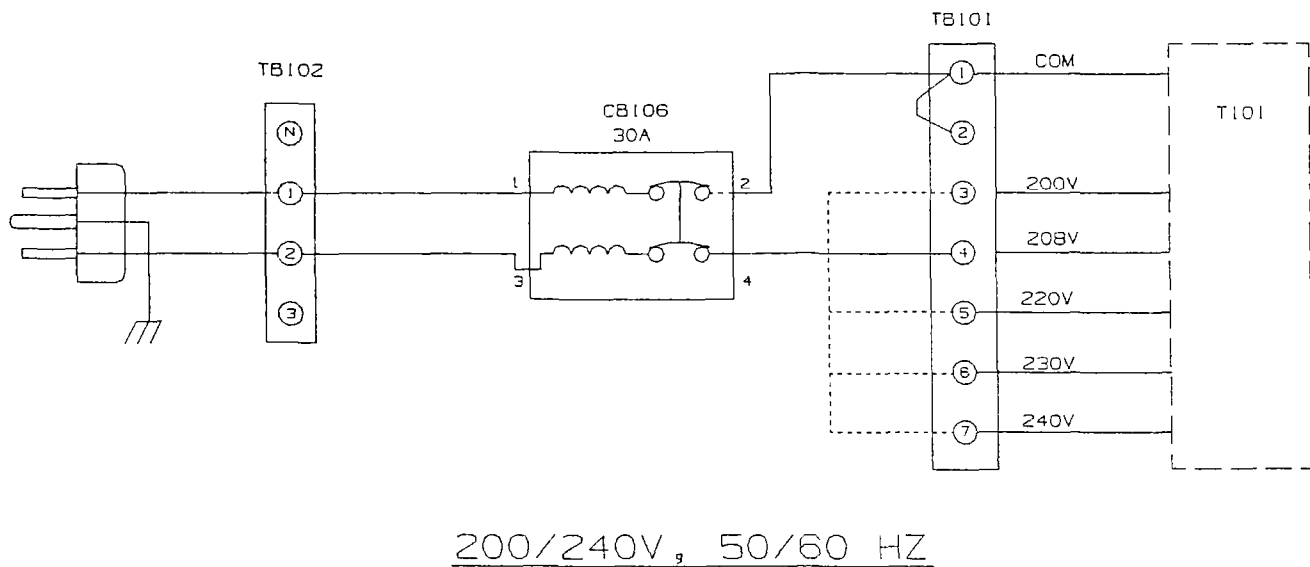

NOTE The schematic above illustrates the circuit connection as 208 V. To change the input voltage, move the wire located at CB106-4 to the desired corresponding terminal on TB101.

Figure 6-1. RC-5C PLUS System Schematic (Sheet 3 of 3)

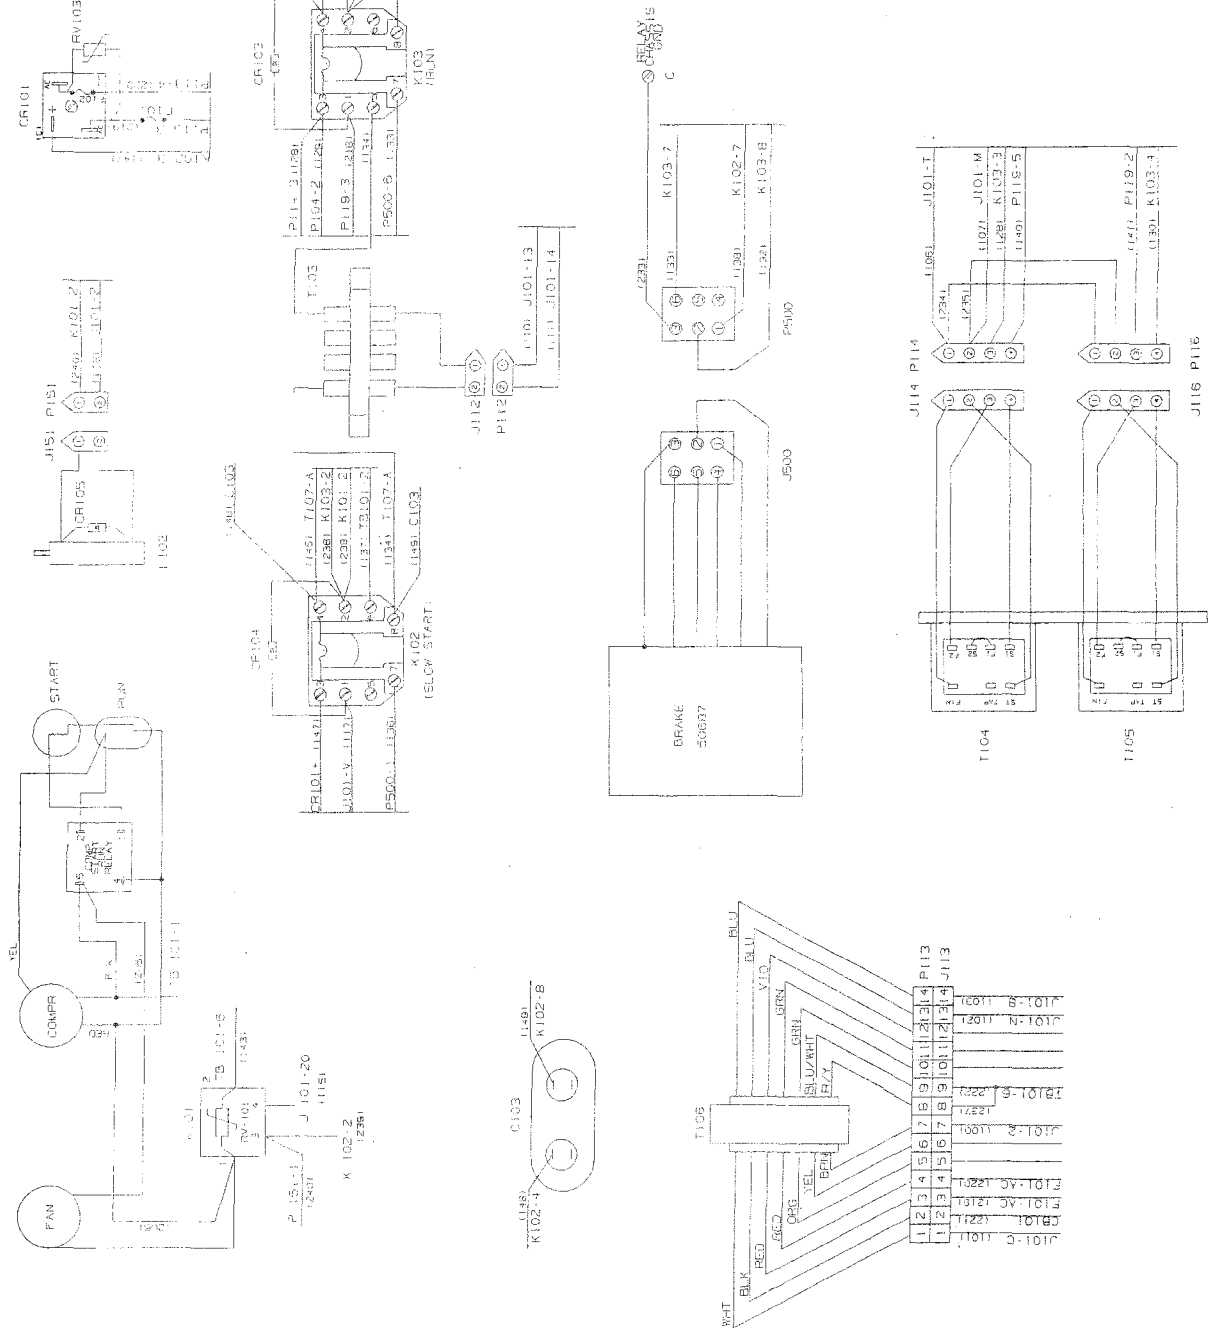


Figure 6-2. RC-5C PLUS Wiring Diagram
(Sheet 1 of 2)

